便携式无线音箱 Portable Wireless Speaker

Inwa^{*}

使用说明书

User's Manual

MZ-608

•请勿将其放置在热源附近。 避免使用散热器,火炉和 其他会发热的设备。 避免长期暴露在阳光和高温下。

• 阅读所有说明, 并保存起来以备日后参考。

- 此音箱有2种模式: 蓝牙模式和TF卡模式。
- 请注意: 当蓝牙断开10分钟后, 音箱将进入休眠关机。 要重新启动音箱,请按电源开关/模式按钮。

安全须知

 
包装内容



产品参数

- ●工作时长: 10hr(60%音量) 充电时长: 2-4hr ● 待机时长: ≥300hr ● 工作电压: DC 5V 1A 蓝牙范围: ≤10m
- 额定功率: 8W+8W 頻率响应: 20Hz-20KHz 助水等级: IP67
- ●产品尺寸: 161*78*55mm
- 电池容量: 2200mAh ● 产品净重: 330a

产品描述



- **①** ➡:减小音量/├─曲:长按按钮音量减。短按按钮 上一首(蓝牙模式和TF卡模式下有效)。 ② ▶:播放暂停/配对:音箱在蓝牙连接状态或TF卡模
- 态下,长按按钮3秒强制断开当前连接,双击进 入音箱TWS配对模式。 ❸ ♣: 增加音量/下一曲: 长按按钮音量加。 短按按钮

式下, 短按按钮播放/暂停; 音箱在蓝牙模式状

- 下一首(蓝牙模式和TF卡模式下有效)。
- 〇: 电源开关/模式: 长按3秒为开机/关机; 开机状 杰短按按钮切换模式...
- ⑤工作/充电指示灯(蓝/红灯)
- ⑤ SD卡接口

操作指令

步骤1

●长按电源按钮"O"3秒,有开机提示音,讲入蓝牙模 式,蓝色指示灯进入闪烁状态,音箱进入与手机蓝牙 搜索配对状态, 默 认音量80%, 每次 打开音箱后, 音箱 都会自动恢复默认 音量80%。 注意:

在蓝牙播放时插入TF卡则自动切换到TF卡播放模式

- 打开手机或其他蓝牙设备上的蓝牙功能, 然后搜索名 为MZ-608的音箱。与音箱连接。
- 步骤3

配对成功后, 会有提示音, 蓝色指示灯将常亮。

步骤4 在手机上播放音乐。 播放音乐时,蓝色

指示灯将慢闪,音

乐暂停时, 蓝色指

示灯将常亮。



将音箱与设备连接时,您可以长按配对按钮 "▶" 3秒 切断当前连接并进入配对状态。然后,蓝色指示灯将

如何将音箱与新设备连接:

快闪, 音箱就可以与新设备连接, 蓝牙状态开机自动 回连上次连接的设备,无连接10分钟关机。



复位功能

◆长按电源按钮 "○" 10秒复位功能,复位后自动开机。

连接记忆功能

● 如果设备蓝牙功能开启, 打开音箱后, 音箱将自动连 接到最后一个配对设备。

充电提示 低电量时音箱会发出提示音报警,需对音箱进行充电。

• 充电时红色指示灯常亮, 充满电后红色指示灯熄灭。

• 建议对带锂电池产品如不使用时每三个月充一次电。

- ●插入TF卡后, 音箱将讲入TF卡模式, 您可以短按电源
- 按钮 "〇" 进行模式切换。 ● 在TF卡模式下, 当 播放音乐时,蓝色 指示灯将慢闪, 音 乐暂停时, 蓝色指 示灯将常亮。

● 接听电话: 当音箱与手机连接时,如果有来电,您可

通话功能

- 以短按播放暂停按钮 "▶" 即可接听。 挂断电话: 当音箱与手机连接时, 通话中您可以短按
- 播放暂停按钮 "▶" 即可挂断。 ● 拒绝诵话: 当音箱与手机连接时,来电时您可以长按
- 播放暂停按钮 "▶" 拒绝来电。

TWS

TWS的连接方式

●打开两台音箱,双击其中一台音箱配对按钮 ">"进入 TWS相互连接状态后发出"咚"进行TWS组队,再双 击另一台音箱配对按钮 "▶" 并发出 "咚" 一声后表示 组队成功并且蓝灯常亮为从机模式,然后再将另一台音 箱与蓝牙设备连接播放音乐,下次开启音箱将会自动连

TF 卡 模 式

保修记录 用户姓名 维修日期 维修员签字 故障描述

购买日期

用户姓名

电子邮件

保修卡

产品型号

经销商

联系电话

用户地址

合格证 检验员: _____

Read all instructions and save them for future reference.

Do not place it near a heat source. Avoid using radiators.

Safety Instructions

- stoves, and other equipment that can generate heat. Avoid long-term exposure to sunlight and high temperatures.
- . This speaker has 2 modes: Bluetooth mode and TF card mode
- Please note that when Bluetooth is disconnected for 10. minutes, the speaker will enter sleep mode and shut down. To restart the speaker, please press the power switch/mode button.

Package Contents



Product Parameters

Battery capacity: 2200mAh Product Weight: 330g(with battery)

Charging time: 2-4hr

Working voltage: DC 5V 1A

 
Product size: 161*78*55mm

Waterproof grade: IP67

Frequency response: 20Hz-20KHz

Working time: 10hr Standby time: ≥300hr Bluetooth range: ≤10m Rated power: 8W+8W Bluetooth version: V5.3

6 SD card interface Power interface: DC 5V 1A



Product Description

- ⊕ : Reduce volume/Previous track: Long press the button to decrease volume. Short press the previous button (valid in Bluetooth mode and TF card mode).
- 2 : Play pause/pairing: When the speaker is in Bluetooth connection or TF card mode, short press the button to play/pause: When the speaker is in Bluetooth mode. press and hold the button for 3 seconds to forcibly disconnect the current connection, and double-click to enter the speaker TWS pairing mode.
- (a) -: Increase volume/Next track: Long press the button to increase volume. Short press the next button (valid in
- Bluetooth mode and TF card mode). ♠ ○: Power switch/mode: Press and hold for 3 seconds to turn on/off: Short press the button to switch modes
- during startup.
- Work/charging indicator light (blue/red light)

Operation Instructions

Step 1

 Long press and hold the power button "O" for 3 seconds. there will be a power on prompt sound, entering Bluetooth mode, and the blue indicator light will flash. The speaker will enter the pairing state with the phone's Bluetooth search, with a default volume of 80%. Every time the speaker is turned on, it will automatically restore the default volume of 80%

Notice:

Inserting a TF card during Bluetooth playback will automatically switch to the TF card playback mode.

Step 2

Turn on the Bluetooth function on your phone or other Bluetooth device, and then search for a speaker named MZ-608. Connect to the speaker.

Step 3

After successful pairing, a prompt tone will sound and the blue indicator light will remain on.

Step 4

The blue indicator light will flash slowly when playing music on the phone, and it Indicator light will remain on when

the music is paused.



Step 5 How to connect a speaker to a new device:

When connecting the speaker to the device, you can press and hold the pairing button ">" for 3 seconds to disconnect the current connection and enter the pairing state. Then, the blue indicator light will flash quickly, and the speaker can be connected to the new device. When the Bluetooth status is turned on, it will automatically connect back to the last connected device. If there is no connection, it will shut down after 10 minutes



Charging Tips

- . When the battery is low, the speaker will sound a warning
- tone and need to be charged. . The red indicator light remains on during charging, but
- goes off when fully charged. . It is recommended to charge products with lithium batteries every three months when not in use.

Reset Function

 Press and hold the power button "O" for 10 seconds to reset the function. After resetting, it will automatically turn on.

Connect Memory Function

If the device's Bluetooth function is turned on, after turning

on the speaker, the speaker will automatically connect to the last paired device.

Call Function

. Answer the call: When the speaker is connected to the mobile phone, if there is an incoming call, you can short press the play pause button ">" to answer.

. Hang up the call: When the speaker is connected to the

phone, you can short press the play pause button ">"

during the call to hang up. . Reject call: When the speaker is connected to the phone, you can long press the play pause button ">" to reject

TWS

the call

TWS connection method: Open two speakers, double-click the pairing button "
on one of them to enter the TWS mutual connection state, and issue a "dong" to form a TWS team. Then, double-click the pairing button "D" on the other speaker and issue a "dong" sound, wait for the two speakers to pair with each other. Then, connect the speaker to a Bluetooth device to play music, and the next time speakers are turned on, they will automatically connect.

TF Card Mode

. After inserting the TF card, the speaker will enter TF card

- mode, and you can short press the power button "O" to switch modes In TF card mode, the
- blue indicator light will flash slowly when playing music, and it will remain on when the music is paused.



Support Information

Need further help, you can contact us by A. Service E-mail: inwa support@innosystemtech.com

- B. Or contact us on Amazon
- Go to Your Orders.
- 2. Find your order in the list.
- 3. Select Problem with order.
- 4. Choose your topic from list displayed. Select Contact



SUCCESS COURIER SL

GOAL REACH CONSULTING LTD

OFFICE 1029 3 HARDMAN STREET 10TH

We simply act as UK representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.



Madrid, 28947 Spain

OST EU 20230424000022 successservice2@hotmail.com

We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.